



MODEL 4800 MASONRY WALL WITH METAL EXPANSION GAP SPACERS


Masonry Wall with Metal Expansion Gap Spacers

Drawing 4800-1

INSTALLATION INSTRUCTIONS

FRL - / 240 / -

- 1. INITIAL DAMPER TEST** Before installing the damper into the wall check the damper's closing operation. This can be achieved by placing the damper into its installation position. Hold the blade clips down to release the blades, and open them to the fully open position. Release the blades and let them drop to the closed position.
2. Ensure the wall penetration is the correct size. Refer to AS1682.2-1990 Appendix 'C'
3. Remove flange screw/bolts and detach flanges from damper casing.
4. Slide damper with metal seal attached into penetration.
5. Replace flanges making sure damper is fixed firmly within the wall. **NOTE: Do not overtighten flange screw/bolts.**
6. Repeat **POINT#1 - INITIAL DAMPER TEST**. Should all operations be alright, release blades from retaining clips and attach blades to rated fusible link supplied.
7. Connect ductwork to fire damper using fire resistant mastic to fill recess if using raw edge connection, or apply mastic to both surfaces of the TDF/TDC flange connections. (Bolts must be of a low melting point material). Refer to AS4254/AS1668 Standards if required.

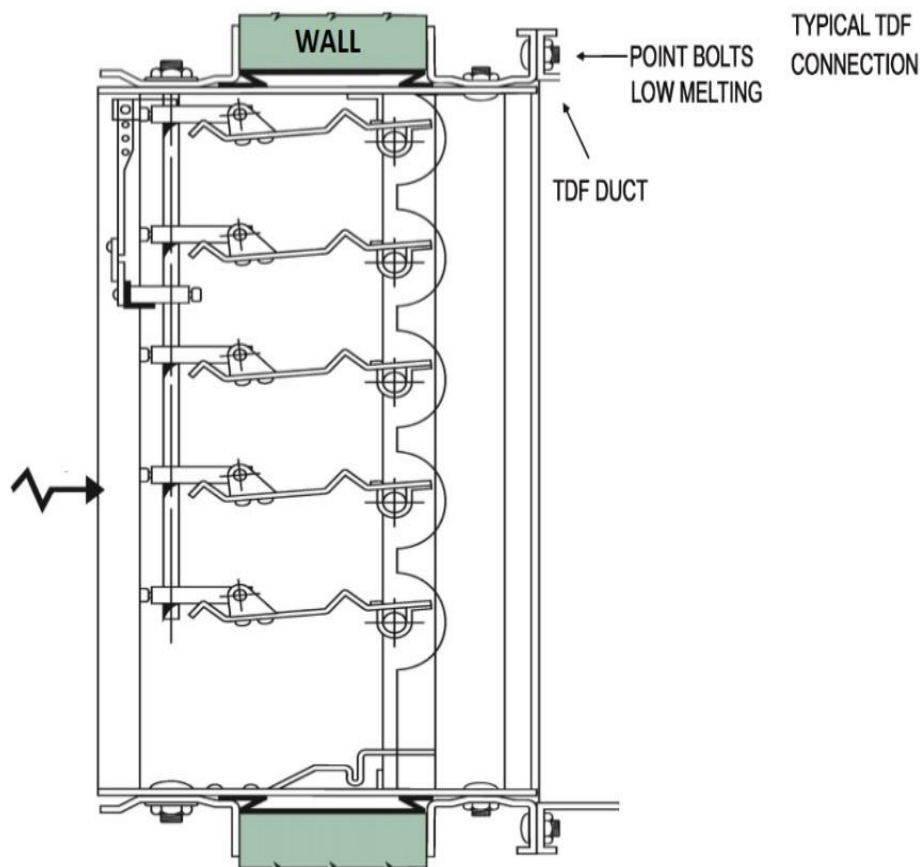

MAINTENANCE INSTRUCTIONS

All Fire Dampers shall be accessible and maintained in accordance with AS1851.

Your local representatives details can be located at www.bullockmfg.com.au

