



## MODEL 4800 ROUND INSTALLATION INSTRUCTIONS

Round Installation Instructions

Drawing 4800r-1

INSTALLATION INSTRUCTIONS

- / 240 / -

1. INITIAL DAMPER TEST - Before installing damper into wall, check damper's closing operation. This can be achieved by placing damper into its installation position. Hold blade retaining clips down to release the blade, and open the blade to the maximum position. Release blade and let drop to the closed position. After viewing proper closure of the blade, reopen the blade and refit the UL33 fusible link to its original position.
2. Ensure that wall penetration is correct size. Opening should be larger than nominal size in both width and height. Refer AS1682.2-1990 Appendix 'C'.
3. Remove flange screws/bolts and detach flanges from damper casing.
4. Wrap damper with suitable insulation and slide into wall penetration. NOTE: Dampers are clearly labelled with AIRFLOW direction and "TOP" of unit.
5. Pack suitable insulation in any space between damper casing and penetration. Refer AS1682.2-1990 Clause 5-6.
6. Replace flanges making sure damper is fixed firmly within the wall. Note: DO not overtighten flange screws/bolts.
7. Repeat INITIAL DAMPER TEST as outlined in point #1
8. Connect ductwork to fire damper using fire resistant mastic to fill recess if using raw edge connection



### MAINTENANCE INSTRUCTIONS

Fire Dampers shall be accessible and maintained.

Your local representatives details can be located at [www.bullockmfg.com.au](http://www.bullockmfg.com.au)